



T-RACK FRÄMRE/BAKRE MERCEDES SPRINTER 07- VW CRAFTER 07-16 H1

Art nr: TF90025 & 26 + TB90034 & 81
TF90027 & 28 + TB90035
Monteringssats: 92122







Installation



Produkten monteras i befintliga fixpunkter



QPAX AB® Pellvägen 4, S-827 63 Färila
Telefon: +46(0)651-760 460 | E-post: info@qpax.se | qpax.se

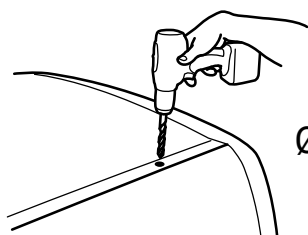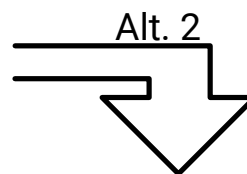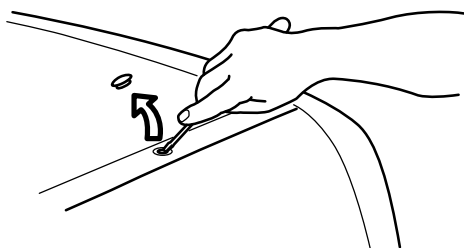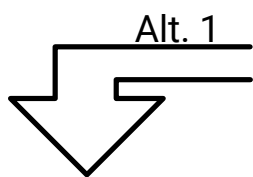

Ø16mm

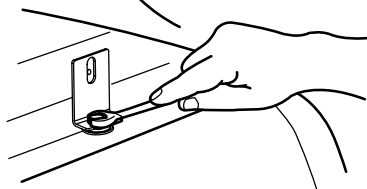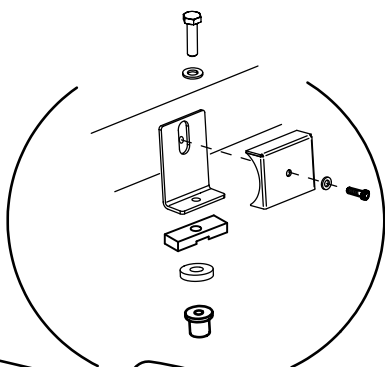

WellNut M8

